Heater Pack H2018–H2024

Standard Trip - Class 20 Heater, continued

Motor Full Load Ampere Rating

Dial Position



	Diai F USILIUII				
Overload Relay Size	Α	В	С	D	Catalog Number ^①
For Use with NEMA S	izes 3–4, IEC Sizes	s L–N Only – Series A	A		
105 A or 144 A	8.0	9.2	10.3	11.5	H2025-3
	11.4	12.8	14.3	15.7	H2026-3
	14.3	15.7	17.4	19.0	H2027-3
	18.0	20.2	22.3	24.5	H2018-3
	24.6	27.6	30.5	33.4	H2019-3
	33.5	37.5	41.5	45.6	H2020-3
	45.7	51.2	56.7	62.1	H2021-3
	62.2	69.7	77.1	84.6	H2022-3
	84.7	95.0	105.0	115.0	H2023-3
	106.0	118.0	131.0	144.0	H2024-3
For Use with Size 5 St	tarters—Series B	and IEC P, R and S w	ith 300/5 CT		
32 A ②	49	59	69	79	H2004B-3
	72	87	103	118	H2005B-3
	107	130	152	174	H2006B-3
	129	156	182	209	H2007B-3
	194	234	274	_	H2008B-3
For Use with Size 6 St	tarters Only—Seri	es B and IECT-V wi	th 600/5 CT		
32 A ②	144	174	205	235	H2005B-3
	215	259	304	348	H2006B-3
	258	312	365	419	H2007B-3
	388	468	547	627	H2008B-3
For Use with Size 7 St	tarters Only—Seri	es B and IECW-X w	rith 1000/5 CT		
32 A ②	163	197	230	264	H2004B-3
	240	290	342	392	H2005B-3
	358	432	506	580	H2006B-3
	430	520	608	698	H2007B-3
	646	780	912	_	H2008B-3
For Use Size 8 Starter	s Only—Series B	and IEC Z with 1500	/5 CT		
32 A ②	244	295	345	396	H2004B-3
	360	435	513	588	H2005B-3
	537	648	759	870	H2006B-3
	645	780	912	1047	H2007B-3
	969	1170	1368	_	H2008B-3

Notes

 $^{^{\}scriptsize \textcircled{\tiny 1}}$ Heater packs are shipped three to a carton, catalog numbers are for three heater packs.

② Sizes 5–8 and IEC P–Z use the 32 A overload relay with current transformers.

Freedom Series

Accessories

DIN Rail and Panel Mounting Adapter

These adapters are required when component overload relays are to be separately mounted. The terminal base adapter includes line terminals and connects with the overload relays on **Page V5-T2-41**.

C306TB1

DIN Rail and Panel Mounting Adapter



Description	Catalog Number
For 32 A overload relay	C306TB1
For 75 A overload relay	C306TB2B ①

Locking Cover for Overload Relay—C306 Only

Snap-on transparent or opaque plastic panel for covering access port to the overload relay trip setting dial—helps prevent accidental or unauthorized changes to trip and reset setting.

Overload Relay Cover

Locking Cover for Overload Relay—C306 Only



Description	Min. Order Qty. (Std. Pkg.)	Catalog Number
Clear cover, no accessibility	50	C320PC3
Gray cover, no accessibility with auto only nib	50	C320PC4
Gray cover, no accessibility with manual only nib	50	C320PC5
Gray cover with FLA dial accessibility, A, B, C, D positions and auto only nib	50	C320PC6
Gray cover with FLA dial accessibility, A, B, C, D positions and manual only nib	50	C320PC7

Modifications

C306 Thermal Overload Relays with Mounting Adapter

Consists of a thermal overload relay mounted to a terminal base adapter—

permits fast and easy installation.

C306 Thermal Overload Relays with Mounting Adapter

Description	Catalog Number
C306DN3B + C306TB1	C306DT3B
C306GN3B + C306TB2B	C306GT3B

Replacement Parts

Heater Pack Replacement

The heater pack series is determined by the 6th character of the catalog number. Series A or prior heater packs (identified by either "A" or "-" as the 6th character) have built-in load lugs. Series B or later heater

packs do not (load lugs are on overload relay). Replacement of Series A or earlier heater packs with Series B or later heater packs, requires the one time addition of Lug Adapter Kit C306KAL1-3B to the Series A1 overload relay.

Superseded Series A Heater Pack

Series B Heater Pack



Heater Pack Replacement Requirements

Existing Heater Pack Catalog Numbers	Replacement Product Required
H2001-3-H2013-3 H2001A-3-H2013A-3	Lug adapter kit C306KAL1-3B and Series B heater pack
H2001B-3-H2013B-3	Series B heater pack
H2014-3 H2014A-3	Replace with lug adapter kit C306KAL1-3B and Series B heater pack
H2014B-3	Series B heater pack
H2015-3-H2017-3	Replace with heater pack chosen from table below
H2015A-3-H2017A-3	Replace with lug adapter kit C306KAL1-3B and Series B heater pack
H2015B-3-H2017B-3	Series B heater pack

Heater Pack Ratings

Motor Full Load Ampere Rating

Dial Position		
Δ	R	

A	В	C	D	Catalog Number
29.0	32.5	36.0	39.5	H2015B-3
39.6	44.3	49.1	53.8	H2016B-3
53.9	60.4	66.8	74.9	H2017B-3

Overload Relay Lug Adapter Kit

Superseded 32 A Series A Overload Relay — C306DN3



These kits are used in conjunction with Catalog Numbers H2001B–H2014B or H2101B–H2114B heater packs as a means of utilizing these Series B heater packs in Catalog Numbers C306DN3 and C306GN3 Series Al overload relays. The kit consists of three lug

Superseded 75 A Series A Overload Relay—C306GN3

Order Heater Pack



adapters and installation instructions. When installing Series B heater packs plus lug adapters in Series A overload relays, refer to heater pack FLA adjustment tables originally supplied with equipment (also supplied with kit).

C306KAL1

Overload Relay Lug



Description	Catalog Number
Series Al overload relay lug adapter kit	C306KAL1-3B

Overload Relay Replacement—Series A Only

When replacing a Catalog Number C306DN3 (Part No. 10-6044) or C306GN3 (10-6319) Series A overload relay on a starter, order a Series B overload relay and Series B heater packs.

Note

 This Series B adapter will accept Series A or B overload relays (C306GN3 or C306GN3B), C306TB2 can only be used with C306GN3.