

DIRECTIONAL CONTROL Headline Valves 21 Series

PRODUCT CATALOG

HIGH TEMPERATURE AND LOW TEMPERATURE Applications





High Temperature and Low Temperature Applications

Directional Control Function

Directional control valves function is to control the direction of flow in the pneumatic circuit. Directional control valves are able to control the way the air passes. These valves can regulate the airflow being capable to stop fluid flow, allow fluid flow, and change the direction of fluid flow. These three functions usually operate in combination.



Illustration examples.

	VALVE FEATURES
Poppet Design	Poppet construction for high dirt tolerance Valves are designed with metal internals and special seals appropriate for use in more extreme temperatures
Mounting Options	Can be mounted close to actuator, reducing length of pipe to be pressurized/exhausted on each cycle
Pilot Supply	Internal or external; easily field-convertible for use with an external pilot supply
High Velocity	Near zero leakage
Positive Sealing	No sliding action to prevent damage and wear
Reliability	Consistent response times over the life of the valve
	Valve models for external pilot supply available, consult ROSS.

Explosion-Proof solenoid pilot valves available, see valves for Hazardous Locations.



For ATEX certified valves order placement, consult ROSS.

Actuation	Available Inlet Port Sizes Functions Maximum								Maximum Flow	Page					
	1/4	3/8	1/2	3/4	1	1-1/4	1-1/2	2	2-1/2	2/2	3/2	4/2	C _v		
Solenoid Pilot Controlled	•	•	•	•	•	•	•	•	•	•	•		40	3 – 9	
Pressure Controlled	•	•	•	•	•	•	•			•	•	•	40	10 – 15	
Accessories and Options										16					

Specifications



		ST	ANDARD SPEC	CIFICATIONS				
	Function		2/2, 3/2, and 4/2	Valve				
	Construction Design		Poppet					
	Actuation		Electrical – Solen Pneumatic – Pres	oid Pilot Controlled sure Controlled				
GENERAL	Manualian	Туре	Inline					
	wounting	Orientation	Any, preferably vertical					
	Connection	1	Threaded; G, NPT					
	Manual Override		Non-locking meta	Non-locking metal button, standard				
	Minimum Operation Frequ	uency	Once per month,	to ensure proper functi	on			
			Hiah	Ambient	0° to 250°F (-17° to 122°C)			
			Temperature	Media	0° to 300°F (-17° to 150°C)			
		Solenoid Pilot Controlled Pressure Controlled		Ambient	-40° to 120°F (-40° to 50°C)			
			Low	Media	-40° to 175°F (-40° to 80°C)			
			Temperature	For temperatures be formation of ice.	low 40°F (4°C) air must be free of water vapor to prevent			
	Temperature		High	Ambient	0° to 300°F (-17° to 150°C)			
OPERATING			Temperature	Media	0° to 300°F (-17° to 150°C)			
CONDITIONS			Low	Ambient	-40° to 175°F (-40° to 80°C)			
				Media	-40° to 175°F (-40° to 80°C)			
			Temperature	For temperatures be formation of ice.	low 40°F (4°C) air must be free of water vapor to prevent			
	Flow Media		Filtered air					
	Operating Pressure		30 to 150 psig (2 to 10 bar)					
	External Pilot Supply		Must be equal to	or greater than inlet pr	essure			
	Solenoids		Rated for continue	ous duty				
	Operating Voltage		24 volts DC					
ELECTRICAL	(each solenoid)		110-120 volts AC	, 50/60 Hz				
SOLENOID PILOT	· · ·		230-240 VOILS AC	, 60 HZ				
	Power Consumption		110-120 V AC - 8	37 VA inrush, 30 VA holo	ling			
			230-240 V AC - 8	37 VA inrush, 30 VA holo	ling			
	Valve Body		Cast Aluminum					
CONSTRUCTION	Poppet		Aluminum and Sta	ainless Steel				
MATERIAL		High Temperature	Fluorocarbon					
	Seals	Low Temperature	Buna-N					
SAFETY DATA	Safety Integrity Level (SIL)	1	Certified by TÜV Rheinland in accordance to IEC 61508 and IEC 61511 safety integrity level 2 (SIL 2) and EN ISO 13849-1, PL c (with application specific diagnosis) in singular application with HFT = 0 and SIL 3					
			and PL e in redundant application with HFT≥1, for details see certificate.					
	IMPORTANT NOTE: Please read carefully and thoroughly all of the CAUTIONS, WARNINGS on the inside back cover.							

PRODUCT CREDENTIALS									
SIL Safety Integrity Level	CE Conformity Declaration	EAC Conformity Declaration	CSA Certificate of Compliance	CRN Certification					
SIL 2 Functional Safety	CE	ERC		Available for appropriately tested valves					



	Size		Flow	w C _v Average Response Constants*		Mainhi		
Pody	Body Port 1 P		Normally Closed	Normally Open	м	I	Ŧ	lb (kg)
DOUY	FUILI	FUIL 2	1-2	1-2		Normally Closed	Normally Open	
	1/4	1/4	2.3	2.3	10	0.96	0.96	
3/8	3/8	3/8	3.8	3.3	10	0.90	0.93	3.0 (1.4)
	1/2	1/2	4.0	3.5	10	0.82	0.88	
	1/2	1/2	7.7	6.5	14	0.39	0.50	
3/4	3/4	3/4	9.0	7.3	14	0.32	0.37	3.3 (1.5)
	1	1	9.0	7.9	14	0.31	0.36	
	1	1	24	21	26	0.19	0.20	
1-1/4	1-1/4	1-1/4	29	20	26	0.14	0.18	7.5 (3.4)
	1-1/2	1-1/2	29	21	26	0.13	0.17	



2/2 Solenoid Pilot Controlled Valves







	Si	ize			Flow $\mathrm{C_v}$			Average Response Constants*					
				Normall	v Closed	Normal	llv Onen				Weight		
Body	Port 1	Port 2	Port 3	Norman	y Gloseu	Norma	ny open	М	Normall	y Closed	Norma	lly Open	ID (KG)
				1-2	2-3	1-2	2-3		1-2	2-3	1-2	2-3	
	1/4	1/4	1/2	2.4	3.4	2.0	2.1	10	1.76	2.08	1.60	2.30	
3/8	3/8	3/8	1/2	3.0	5.8	2.3	2.4	10	0.95	1.07	1.03	1.60	3.0 (1.4)
	1/2	1/2	1/2	3.0	5.2	2.9	2.8	10	0.94	0.98	11.00	2.00]
	1/2	1/2	1	6.6	12	6.5	7.0	11	0.58	0.64	0.50	0.70	
3/4	3/4	3/4	1	7.8	13	7.5	7.5	11	0.38	0.41	0.43	0.67	3.3 (1.5)
	1	1	1	7.5	12	7.7	7.6	11	0.24	0.36	0.42	0.60	
	1	1	1-1/2	24	40	15	17	28	0.16	0.18	0.17	0.20	
1-1/4	1-1/4	1-1/4	1-1/2	29	39	21	23	28	0.12	0.17	0.15	0.19	7.5 (3.4)
	1-1/2	1-1/2	1-1/2	30	38	22	23	28	0.12	0.16	0.13	0.18]











	Size			Flo	w C _v	Av	erage Response C	onstants*	Woight
Pody	Dort 1	Dort 2 /	Dort 2	1214	42.22	м		-	lb (kg)
DUUY	FUILI	FUIL 2, 4	FUILD	1-2, 1-4	4-3, 2-3	141	1-2, 1-4	4-3, 2-3	
	1/4	1/4	1/2	2.1	2.2	30	1.70	2.28	
3/8	3/8	3/8	1/2	2.5	3.1	30	1.13	1.33	3.0 (1.4)
	1/2	1/2	1/2	2.9	3.8	30	1.00	1.22	
	1/2	1/2	1	5.7	6.5	46	0.50	0.76	
3/4	3/4	3/4	1	7.1	8.7	46	0.36	0.55	5.8 (2.6)
	1	1	1	7.7	10	46	0.36	0.50	
	1	1	1-1/2	18	23	99	0.19	0.22	
1-1/4	1-1/4	1-1/4	1-1/2	20	28	99	0.19	0.22	12.0 (5.4)
	1-1/2	1-1/2	1-1/2	21	29	99	0.16	0.22	

Valve Response Time – Response Time (msec) = $M + (F \cdot V)$. This is the average time required to fill a volume V (cubic inches) to 90% of supply pressure or to exhaust it to 10% of supply pressure. M and F values are shown above.



Outlet Port

DIMENSIONS – 4/2 VALVES





Inches (mm)

2/2 Pressure Controlled Valves



	Size		Flov	N Cv	Average Response Constants*			Wainhi
Pody	Dort 1	Dort 2	Normally Closed	Normally Open	м	I	Ŧ	lb (kg)
БОЦУ	Port I	Port 2	1-2	1-2	1 171	Normally Closed	Normally Open	
	1/4	1/4	2.3	2.3	10	0.91	0.91	1.8 (0.8)
3/8	3/8	3/8	3.8	3.3	10	0.70	0.76	1.8 (0.8)
	1/2	1/2	4.0	3.5	10	0.64	0.72	1.8 (0.8)
	1/2	1/2	7.7	6.5	16	0.37	0.43	4.2 (2.0)
3/4	3/4	3/4	9.0	7.3	16	0.34	0.39	4.2 (2.0)
	1	1	9.0	7.9	16	0.34	0.37	4.2 (2.0)
	1	1	24	21	27	0.17	0.17	11.0 (5.0)
1-1/4	1-1/4	1-1/4	29	20	27	0.19	0.19	11.0 (5.0)
-	1-1/2	1-1/2	29	21	27	0.18	0.18	11.0 (5.0)









3/2 Pressure Controlled Valves



	Si	ize			Flo	w C _v		Average Response Constants*					
				Normall	v Closed	Norma	lly Onon			Weight			
Body	Port 1	Port 2	Port 3	NUTITALI	y Giuseu	NUTILIA	ny open	М	Normall	y Closed	Normal	ly Open	lb (kg)
				1-2	2-3	1-2	2-3		1-2	2-3	1-2	2-3	
	1/4	1/4	1/2	2.4	3.4	2.0	2.1	10	1.76	2.08	1.60	2.30	1.8 (0.8)
3/8	3/8	3/8	1/2	3.0	5.8	2.3	2.4	10	0.95	1.07	1.03	1.60	1.8 (0.8)
	1/2	1/2	1/2	3.0	5.2	2.9	2.8	10	0.94	0.98	11.00	2.00	1.8 (0.8)
	1/2	1/2	1	6.6	12	6.5	7.0	11	0.58	0.64	0.50	0.70	4.5 (2.1)
3/4	3/4	3/4	1	7.8	13	7.5	7.5	11	0.38	0.41	0.43	0.67	4.5(2.1)
	1	1	1	7.5	12	7.7	7.6	11	0.24	0.36	0.42	0.60	4.5 (2.1)
	1	1	1-1/2	24	40	15	17	28	0.16	0.18	0.17	0.20	11.0 (5.0)
1-1/4	1-1/4	1-1/4	1-1/2	29	39	21	23	28	0.12	0.17	0.15	0.19	11.0 (5.0)
	1-1/2	1-1/2	1-1/2	30	38	22	23	28	0.12	0.16	0.13	0.18	11.0 (5.0)



3/2 Pressure Controlled Valves





4/2 Pressure Controlled Valves



Size				Flov	N Cv		Weisht		
Pody	Dort 1	Dort 2 /	Dort 2	1214	42.22	м		F	lb (kg)
DUUY	FUILI	FUIL 2, 4	FUILS	1-2, 1-4	4-3, 2-3	IVI	1-2, 1-4	4-3, 2-3	
	1/4	1/4	1/2	2.1	2.9	30	1.70	2.28	3.0 (1.4)
3/8	3/8	3/8	1/2	2.9	4.2	30	1.13	1.33	3.0 (1.4)
	1/2	1/2	1/2	3.1	4.3	30	1.00	1.22	3.0 (1.4)
	1/2	1/2	1	5.6	8.1	46	0.50	0.76	5.8 (2.6)
3/4	3/4	3/4	1	7.0	9.3	46	0.36	0.55	5.8 (2.6)
	1	1	1	7.8	10	46	0.36	0.50	5.8 (2.6)
	1	1	1-1/2	19	26	99	0.19	0.22	12.0 (5.4)
1-1/4	1-1/4	1-1/4	1-1/2	21	27	99	0.19	0.18	12.0 (5.4)
	1-1/2	1-1/2	1-1/2	22	27	99	0.16	0.15	12.0 (5.4)



4/2 Pressure Controlled Valves





Accessories & Options

	SILENCERS										
	Port Size	Thread Type	Model	Number	Flow	Pressure Range					
		iniouu iypo	R/Rp Thread	NPT Thread	Avg. C _v	psig (bar)					
Silencers	1/2	Male	D5500A4003 5500A4003		4.7						
	1	Male	D5500A6003	5500A6003	15	0-290 (0-20)					
	1-1/2	Female	D5500A8001	5500A8001	30						
SOLENOID PILOT OPTIONS											
	Kit Number										
Indiactor Light	24 V	DC	110-120 V AC	, 50-60 Hz	230 V AC,	, 50-60 Hz					
Kits	862K8	87-W	862K8	7-Z	862k	(87-Y					
	To visually verify valve operation, indicator light kits are available for single solenoid models. Indicator lights are standard on double solenoid valves. The indicator light is illuminated when the solenoid is energized.										
	Flush B	utton	Extended	Button	Extended But	ton with Palm					
-	Locking Type	Kit Number	Locking Type	Kit Number	Locking Type	Kit Number					
Manual Quarrida	Non-Locking	790K87	Non Looking	701//97	Non Looking	001007					
Kite	Locking	792K87	NUII-LUCKIIIg	791607	NUII-LUCKIIIg	904007					
KIIS	Flush metal button,	non-locking manual	override is standard on	solenoid models.							
	Each of the buttons in the override kits is made of metal and is spring-returned. The locking type button, however, can be kept in the actuated position by turning the slot in the top of the button with a screwdriver.										





ROSS OPERATING VALVE, ROSS CONTROLS®, ROSS DECCO®, and AUTOMATIC VALVE INDUSTRIAL, collectively the "ROSS Group".

PRE-INSTALLATION or SERVICE

1. Before servicing a valve or other pneumatic component, be sure all sources of energy are turned off, the entire pneumatic system is shut down and exhausted, and all power sources are locked out (ref: OSHA 1910.147, EN 1037).

2. All ROSS Group Products, including service kits and parts, should be installed and/or serviced only by persons having training and experience with pneumatic equipment. Because any product can be tampered with and/or need servicing after installation, persons responsible for the safety of others or the care of equipment must check ROSS Group Products on a regular basis and perform all necessary maintenance to ensure safe operating conditions.

3. All applicable instructions should be read and complied with before using any fluid power system to prevent harm to persons or equipment. In addition, overhauled or serviced valves must be functionally tested prior to installation and use. If you have any questions, call your nearest ROSS Group location.

4. Each ROSS Group Product should be used within its specification limits. In addition, use only ROSS Group components to repair ROSS Group Products.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

FILTRATION and LUBRICATION

1. Dirt, scale, moisture, etc., are present in virtually every air system. Although some valves are more tolerant of these contaminants than others, best performance will be realized if a filter is installed to clean the air supply, thus preventing contaminants from interfering with the proper performance of the equipment. The ROSS Group recommends a filter with a 5-micron rating for normal applications.

2. All standard ROSS Group filters and lubricators with polycarbonate plastic bowls are designed for compressed air applications only. Use the metal bowl guard, where provided, to minimize danger from high pressure fragmentation in the event of bowl failure. Do not expose these products to certain fluids, such as alcohol or liquefied petroleum gas, as they can cause bowls to rupture, creating a combustible condition and hazardous leakage. Immediately replace crazed, cracked, or deteriorated bowls.

3. Only use lubricants which are compatible with materials used in the valves and other components in the system. Normally, compatible lubricants are petroleum base oils with oxidation inhibitors, an aniline point between 180°F (82°C) and 220°F (104°C), and an ISO 32, or lighter, viscosity. Avoid oils with phosphate type additives which can harm polyurethane components, potentially leading to valve failure which risks personal injury, and/or damage to property.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

AVOID INTAKE/EXHAUST RESTRICTION

1. Do not restrict air flow in the supply line. To do so could reduce the pressure of the supply air below minimum requirements for the valve and thereby causing erratic action.

2. Do not restrict a valve's exhaust port as this can adversely affect its operation. Exhaust silencers must be resistant to clogging and must have flow capacities at least as great as the exhaust capacities of the valves. Contamination of the silencer can result in reduced flow and increased back pressure.

WARNINGS: Failure to follow these instructions can result in personal injury and/or property damage.

SAFETY APPLICATIONS

1. Mechanical Power Presses and other potentially hazardous machinery using a pneumatically controlled clutch and brake mechanism must use a press control double valve with a monitoring device. A double valve without a self-contained monitoring device should be used only in conjunction with a control system which assures monitoring of the valve. All double valve installations involving hazardous applications should incorporate a monitoring system which inhibits further operation of the valve and machine in the event of a failure within the valve mechanism.

2. Safe Exhaust (dump) valves without a self-contained monitoring device should be used only in conjunction with a control system which assures monitoring of the valve. All Safe Exhaust valve installations should incorporate a monitoring system which inhibits further operation of the valve and machine in the event of a failure within the valve mechanism.

3. Per specifications and regulations, the ROSS L-O-X[®] and L-O-X[®] with EEZ-ON[®], N06 and N16 Series operation products are defined as energy isolation devices, NOT AS EMERGENCY STOP DEVICES.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

STANDARD WARRANTY

All products sold by the ROSS Group are warranted for a one-year period [with the exception of Filters, Regulators and Lubricators ("FRLs") which are warranted for a period of seven (7) years] from the date of purchase. All products are, during their respective warranty periods, warranted to be free of defects in material and workmanship. The ROSS Group's obligation under this warranty is limited to repair, replacement or refund of the purchase price paid for products which the ROSS Group has determined, in its sole discretion, are defective. All warranties become void if a product has been subject to misuse, misapplication, improper maintenance, modification or tampering. Products for which warranty protection is sought must be returned to the ROSS Group freight prepaid.

THE WARRANTY EXPRESSED ABOVE IS IN LIEU OF AND EXCLUSIVE OF ALL OTHER WARRANTIES AND THE ROSS GROUP EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE ROSS GROUP MAKES NO WARRANTY WITH RESPECT TO ITS PRODUCTS MEETING THE PROVISIONS OF ANY GOVERNMENTAL OCCUPATIONAL SAFETY AND/OR HEALTH LAWS OR REGULATIONS. IN NO EVENT IS THE ROSS GROUP LIABLE TO PURCHASER, USER, THEIR EMPLOYEES OR OTHERS FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY RESULT FROM A BREACH OF THE WARRANTY DESCRIBED ABOVE OR THE USE OR MISUSE OF THE PRODUCTS. NO STATEMENT OF ANY REPRESENTATIVE OR EMPLOYEE OF THE ROSS GROUP MAY EXTEND THE LIABILITY OF THE ROSS GROUP AS SET FORTH HEREIN.



		ROSS CONTROLS	Tel: +1-248-764-1800	www.rosscontrols.com
	USA	AUTOMATIC VALVE	Tel: +1-248-474-6700	www.automaticvalve.com
AMERICAS		ROSS DECCO	Tel: +1-248-764-1800	www.rossdecco.com
	Brazil	ROSS BRASIL	Tel: +55-11-4335-2200	www.rosscontrols.com.br
	Canada	ROSS CANADA	Tel: +1-416-251-7677	www.rosscanada.com
	France	ROSS FRANCE SAS	Tel: +33-(0)1-49-45-65-65	www.rossfrance.com
	Comment	ROSS EUROPA	Tel: +49 (0)6103-7597-100	www.rosseuropa.com
EUROPE	Germany	manufactIS	Tel: +49 (0)2013-16843-0	www.manufactis.net
	United Kingdom	ROSS PNEUMATROL		www.rossuk.co.uk
	Oniced Kingdom	(FKA ROSS UK Ltd. and pneumatrol Ltd.)	181. ±44 (0)1234 672277	www.pneumatrol.com
	China	ROSS CONTROLS (CHINA) Ltd.	Tel: +86-21-6915-7961	www.rosscontrolschina.com
Asia & Pacific	India	ROSS CONTROLS INDIA Pvt. Ltd.	Tel: +91-44-2624-9040	www.rosscontrols.com
	Japan	ROSS ASIA K.K.	Tel: +81-42-778-7251	www.rossasia.co.jp

Full-Service Global Locations

There are ROSS Distributors Throughout the World

To meet your requirements across the globe, ROSS distributors are located throughout the world. Through ROSS or its distributors, guidance is available for the selection of ROSS products, both for those using fluid power components for the first time and those designing complex systems.

Other literature is available for engineering, maintenance, and service requirements.

If you need products or specifications not shown in this catalog, please visit ROSS' website, contact ROSS or your ROSS distributor. The ROSS Support Team will be happy to assist you in selecting the best product for your application.

For a current list of countries and local distributors, visit ROSS' at www.rosscontrols.com.