

Dale Series CP, CX, LF, LX - *A Model* Inline Poppet Valves & Manifolds



Thank You!

You have purchased a premium-quality ROSS pneumatic valve. It is a poppet valve with metal internals designed for inline mounting, and has been built to the highest standards. With care in its installation and maintenance, you can expect it to have a long and economical service life. So before you go any further, please take a few minutes to look over the information in this folder. Then save it for future reference and for the useful service information it contains. A general service manual with more detailed information is available from ROSS upon request.



Series
CP CX, LF, LX
Valves

VALVE INSTALLATION

Please read and make sure you understand all installation instructions before proceeding with the installation.

Additional technical documentation is available for download at www.rosscontrols.com.

If you have any questions about installation or servicing your valve, please contact ROSS or your authorized ROSS distributor, see contact information listed at the back of this document, or visit www.rosscontrols.com to find your distributor.

Important Note: ROSS Dale Series CP, CX, LF, LX valves are not designed as control valves for air clutch/brake mechanisms on mechanical power presses, and must not be installed for such use. Only double valves conforming to OSHA standards should be used in such applications.

Pneumatic equipment should be installed only by persons trained and experienced in such installation.

Air Lines: Before installing a valve in a new or an existing system, the air lines must be blown clean of all contaminants. It is recommended that an air filter be installed in the inlet line close to the valve.

Valve Inlet (Port 1): Be sure that the supply line is of adequate size and does not restrict the air supply because of a crimp in the line, a sharp bend, or a clogged filter element.

Valve Outlets (Port 2): For faster pressurizing and exhausting of the mechanism being operated by the valve, locate the valve as close as possible to the mechanism. The lines must be of adequate size and be free of crimps and sharp bends.

Valve Exhausts (Port 3): Do not restrict the air flow from the exhaust port of the valve body or pilot body as this can adversely affect the operation of the valve. However, to reduce exhaust noise, an efficient silencer may be used. ROSS silencers reduce impact noise by as much as 25 dB, and produce little back pressure.

Electrical Supply: The voltage and hertz ratings of the valve solenoids (if any) are shown on the pilot housing. The electrical supply must correspond to these ratings. Otherwise the solenoids are subject to early failure. The power supply must be capable of handling the inrush current without significant voltage drop.

See *Valve Specifications* on page 3 for information on inrush current.

Operating Pressures and Temperatures: Allowable ranges for pressure and temperatures are given in the *Valve Specifications* on page 3. Exceeding the values shown can shorten valve life.

Pilot Supply:

Solenoid Control: Pressure for the pilot valve is supplied internally for most valves and requires no special connection. However, if your valve is designated for external pilot supply, a 10-32 or 1/8-inch pilot supply line must be connected to port X-1 in the manifold.

See *Valve specifications* on page 3 for pressure requirements.

Pipe Installation: To install pipe in valve ports, engage pipe one turn, apply pipe thread sealant (tape not recommended), and tighten pipe. This procedure will prevent sealant from entering and contaminating the valve.

Note: Valves for vacuum service requires an external pilot supply.

VALVE MAINTENANCE

Pneumatic equipment should be maintained only by persons trained and experienced in the maintenance of such equipment.

Supply Clean Air. Foreign material lodging in valves is a major cause of breakdowns. The use of a 5-micron rated air filter located close to the valve is strongly recommended. The filter bowl should be drained regularly, and if its location makes draining difficult, the filter should be equipped with an automatic drain.

Check Lubricator Supply Rate. A lubricator should put a fine oil mist into the air line in direct proportion to the rate of air flow. Excessive lubrication can cause puddling in the valve and lead to malfunctions. For most applications an oil flow rate in the lubricator of one drop per minute is adequate (note that this valve itself does not require air line lubrication, but some optional adaptors do, i.e., air index, etc.).

Compatible Lubricants. Although this valve does not require air line lubrication, it may be used with lubricated air being supplied to other mechanisms. Some oils contain additives that can harm seals or other valve components and so cause the valve to malfunction. Avoid oils with phosphate additives (e.g., zinc dithiophosphate), and diester oils; both types can harm valve components. The best oils to use are generally petroleum base oils with oxidation inhibitors, an aniline point between 180°F (82°C) and 220°F (104°C), and an ISO 32 or lighter viscosity.

Some compatible oils are listed above at the right. These oils, although believed to be compatible, could change without notice because manufacturers sometimes reformulate their oils. Therefore, use oils specifically compounded for air line service. If it is a synthetic oil, contact the oil manufacturer for compatibility information.

Cleaning the Valve. If the air supplied to the valve has not been well filtered, the interior of the valve may accumulate dirt and varnish which can affect the valve's performance.

COMPATIBLE LUBRICANTS

Maker	Brand Name
Amoco	American Industrial Oil 32; Amoco
	Spindle Oil C; Amolite 32
Citgo	Pacemaker 32
Exxon	Spinesstic 22; Teresstic 32
Mobil	Velocite 10
Non-Fluid Oil	Air Lube 10H/NR
Shell	Turbo T32
Sun	Sunvis 11; Sunvis 722
Texaco	Regal R&O 32
Union	Union Turbine Oil

A schedule should be established for cleaning all valves, the frequency depending on the cleanliness of the air being supplied.

To clean the valve use any good commercial solvent. Do *not* scrape varnished surfaces. Also do not use chlorinated solvents or abrasive materials. The former damages seals, and abrasives can do permanent damage to metal parts. Before reassembling the valve, lubricate all sliding surfaces with a grease such as MobilGrease 28.

Electrical Contacts. In the electrical circuits associated with the valve solenoids, keep all switches or relay contacts in good condition to avoid solenoid malfunctions.


Replace Worn Components. In some cases it is not necessary to remove the valve from its installation for servicing. However, turn off the electrical power to the valve, shut off the air supply, and exhaust the air in the system before beginning any disassembly operation.

Service kits for these valves are listed on page 3.

EXTERNAL PILOT SUPPLY CONVERSION:

The Series CP valves can be easily field converted to external pilot supply by simply removing existing pipe plug from port X-1, and installing a 10-32, or 1/8" air supply to the X-1 port on the base manifold.

Note: Valves for vacuum service requires an external pilot supply.

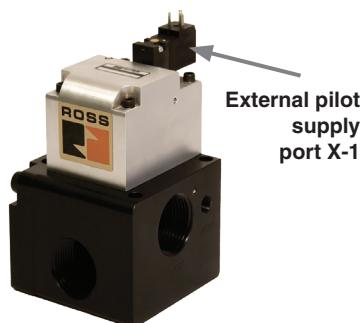

VALVE SERVICE

Solenoids: AC or DC power. Rated for continuous duty. Voltage and hertz ratings shown on pilot housing.

Standard Voltages: 120 volts AC, 50/60 Hz; 24 volts DC.

Power Consumption:

Series CP, CX 2-port 2-position (2/2) normally closed (NC) & normally open (NO) 1/2" and 1" inlet, Series CP, CX 3/2 (NC & NO) 1/2" inlet: 3 VA on AC; 2.5 watts on DC.

Series CP, CX 2-port 2-position 1 1/2" and 2 1/2" inlet, Series CP, CX 3/2 (NC & NO) 1" inlet, Series LF, LX 2/2 except 3/8" and 1/2" inlet: 36 VA inrush, 23 VA holding on AC; 15 watts on DC.

Series LF 2-port 2-position 3/8" and 1/2" inlet: 9.8 VA on AC; 7.5 watts on DC.

Ambient Temperature: 40° to 120°F (4° to 50°C).

Media Temperature: 40° to 175°F (4° to 80°C).

Flow Media: Filtered air. For liquid applications, consult ROSS.

Inlet Pressure:

Solenoid Pilot: Vacuum to 145 psig (10.0 bar), (vacuum service requires external pilot supply).

Pressure Controlled: Vacuum to 250 psig (17.2 bar).

Pilot Pressure: Must be equal to or greater than inlet pressure. For vacuum service models requiring external pilot supply, a pilot pressure of at least 30 psig (2.1 bar) is required.

IMPORTANT NOTE: Please read carefully and thoroughly all the **WARNINGS** and **CAUTIONS** on page 4.

VALVE SERVICE

ROSS would be happy to service this valve for you at its factory repair center. If you purchased your valve from ROSS please contact ROSS customer service, if you purchased your valve thru an authorized ROSS distributor please contact the distributor for return instructions.

However, if you choose to service this valve yourself, it is strongly recommended that you visit our website at www.rosscontrols.com for available downloadable technical documentation.

Valve Body Service Kits. These kits contain all parts needed for complete reconditioning of a valve body. Included are poppets, spindle, all required gaskets and seals, and instructions for use.

Solenoid Pilot Kits. These kits contain all parts needed to recondition the pilot valve.

Order by the following kit numbers:

Series CP, CX 2/2 NC 1/2" & 1" inlet - **1467B79**

Series CP, CX 3/2 NC 1/2" inlet - **1467B79**

Series CP, CX 2/2 NO 1/2" & 1" inlet - **1468B79**

Series CP, CX 3/2 NO 1/2" inlet - **1468B79**

Series CP, CX 2/2 1 1/2" & 2 1/2" inlet - **1404H79**

Series CP, CX 3/2 NC 1" inlet - **1404H79**, NO 1" inlet **1477H79**

Series LF, LX 2/2 NC & NO (except 3/8") and 1/2" - **1404H79**

Series LF, LX 2/2 NC 3/8" & 1/2" - **1469H79**

Series LF, LX 2/2 NO 3/8", 1/2", 3/4", 1" **1477H79**

Solenoids. Replacement solenoids can be ordered by the part numbers listed below. Specify the required voltage and hertz when ordering.

Series CP, CX 2/2 NC 1/2" & 1" inlet - **1467B79**

Series CP, CX 3/2 NC 1/2" inlet - **1467B79**

Series CP, CX 2/2 NO 1/2" & 1" inlet - **1468B79**

Series CP, CX 3/2 NO 1/2" inlet - **1468B79**

Series CP, CX 2/2 1 1/2" & 2 1/2" inlet - **360K33**

Series CP, CX 3/2 NC 1" inlet - **360K33**, NO 1" inlet - **308K33**

Series LF, LX 2/2 NC (except 3/8" and 1/2" inlet) - **360K33**

Series LF, LX 2/2 NC & NO 3/8" & 1/2" - **308K33**

Series LF, LX 2/2 NO 3/4" & 1" - **308K33**

Valve Type	Model Type	Port Size	Valve BodyKit*
2/2 Normally Closed	CP, CX	3/8 - 1/2	2295H77
		3/4 - 1	2297H77
	LF, LX	1 1/4 - 1 1/2	2299H77
		2 - 2 1/2	2300H77
2/2 Normally Open	CP, CX	3/8 - 1/2	2295H77
		3/4 - 1	2297H77
	LF, LX	1 1/4 - 1 1/2	2299H77
		2 - 2 1/2	2300H77
3/2 Normally Closed	CP, CX	3/8 - 1/2	2296H77
		3/4 - 1	2298H77
3/2 Normally Open	CP, CX	3/8 - 1/2	2296H77
		3/4 - 1	2298H77

CAUTIONS And WARNINGS



PRE-INSTALLATION or SERVICE

1. Before servicing a valve or other pneumatic component, be sure that all sources of energy are turned off, the entire pneumatic system is shut off and exhausted, and all power sources are locked out (ref: OSHA 1910.147, EN 1037).
2. All ROSS® products, including service kits and parts, should be installed and/or serviced only by persons having training and experience with pneumatic equipment. Because any installation can be tampered with or need servicing after installation, persons responsible for the safety of others or the care of equipment must check every installation on a regular basis and perform all necessary maintenance.
3. All applicable instructions should be read and complied with before using any fluid power system in order to prevent harm to persons or equipment. In addition, overhauled or serviced valves must be functionally tested prior to installation and use. If you have any questions, call your nearest ROSS location listed in the table below.
4. Each ROSS product should be used within its specification limits. In addition, use only ROSS parts to repair ROSS products.

WARNINGS: *Failure to follow these directions can adversely affect the performance of the product or result in the potential for human injury or damage to property.*

FILTRATION and LUBRICATION

5. Dirt, scale, moisture, etc. are present in virtually every air system. Although some valves are more tolerant of these contaminants than others, best performance will be realized if a filter is installed to clean the air supply, thus preventing contaminants from interfering with the proper performance of the equipment. ROSS recommends a filter with a 5-micron rating for normal applications.
6. All standard ROSS filters and lubricators with polycarbonate plastic bowls are designed for compressed air applications only. Do not fail to use the metal bowl guard, where provided, to minimize danger from high pressure fragmentation in the event of bowl failure. Do not expose these products to certain fluids, such as alcohol or liquefied petroleum gas, as they can cause bowls to rupture, creating a combustible condition, hazardous leakage, and the potential for human injury or damage to property. Immediately replace a crazed, cracked, or deteriorated bowl. When bowl gets dirty, replace it or wipe it with a clean dry cloth.

STANDARD WARRANTY

All products sold by ROSS CONTROLS are warranted for a one-year period [with the exception of all Filters, Regulators and Lubricators ("FRLs") which are warranted for a period of seven years] from the date of purchase to be free of defects in material and workmanship. ROSS' obligation under this warranty is limited to repair or replacement of the product or refund of the purchase price paid solely at the discretion of ROSS and provided such product is returned to ROSS freight prepaid and upon examination by ROSS is found to be defective. This warranty becomes void in the event that product has been subject to misuse, misapplication, improper maintenance, modification or tampering. THE WARRANTY EXPRESSED ABOVE IS IN LIEU OF AND EXCLUSIVE OF ALL OTHER WARRANTIES AND ROSS EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ROSS MAKES NO WARRANTY WITH RESPECT TO ITS PRODUCTS MEETING THE PROVISIONS OF ANY GOVERNMENTAL OCCUPATIONAL SAFETY AND/OR HEALTH LAWS OR REGULATIONS. IN NO EVENT IS ROSS LIABLE TO PURCHASER, USER, THEIR EMPLOYEES OR OTHERS FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY RESULT FROM A BREACH OF THE WARRANTY DESCRIBED ABOVE OR THE USE OR MISUSE OF THE PRODUCTS. NO STATEMENT OF ANY REPRESENTATIVE OR EMPLOYEE OF ROSS MAY EXTEND THE LIABILITY OF ROSS AS SET FORTH HEREIN.

ROSS CONTROLS	USA	Tel: 1-248-764-1800	web site: www.rosscontrols.com
ROSS EUROPA GmbH	Germany	Tel: 49-6103-7597-0	web site: www.rosseuropa.com
ROSS ASIA K.K.	Japan	Tel: 81-42-778-7251	web site: www.rossasia.co.jp
ROSS UK Ltd.	UK	Tel: 44-1543-671495	web site: www.rossuk.co.uk
ROSS SOUTH AMERICA Ltda.	Brazil	Tel: 55-11-4335-2200	email: vendas@rosscontrols.com
ROSS CONTROLS INDIA Pvt. Ltd.	India	Tel: 91-44-2624-9040	email: ross.chennai@rosscontrols.com
ROSS CONTROLS (CHINA) Ltd.	China	Tel: 86-21-6915-7961	web site: www.rosscontrolschina.com
ROSS FRANCE S.A.S.	France	Tel: 33-1-49-45-65-65	web site: www.rossfrance.com
ROSS CANADA	Canada	Tel: 1-416-251-7677 (416-251-ROSS)	web site: www.rosscanada.com