

CLUTCH/BRAKE CONTROL DOUBLE VALVES DM^{2®} SERIES D

PRODUCT CATALOG





DM^{2®} Series D Clutch/Brake Control Double Valves Product Overview

Clutch/Brake Control Function

The DM^{2®} Series D double valve is designed to provide SAFETY for the operators and maintenance personnel working on presses.



The DM^{2®} Series D double valve is a patented 3/2 normally closed valve (with an intermediate, lockout position) distinguished by SERPAR[®] Crossflow passages with poppet and spool valving on the main valve stems. This arrangement provides the valve's outstanding flow characteristics and an integrated monitoring capability with total memory. The valve provides dynamic monitoring and dynamic memory.

Dynamic Monitoring means that all monitoring components change state on every valve cycle. Should the valve elements cycle asynchronously, the valve will exhaust downstream air and lock-out, prohibiting further operation.

Dynamic Memory within a monitoring system indicates that when a valve lock-out occurs, the valve will retain the fault information regardless of air or electrical changes. The DM^{2®} system can only be reset by a defined operation/procedure, and will not self-reset (turning the valve off and on) or reset when inlet air supply is removed and re-applied. Such automatic resetting would conceal potential hazards from the operator.

VALVE FEATURES									
Redundant Contro	ol	Redundant cont	trol can ach	nieve Categ	ory 4, PL e,	when used with	proper safety control	s	
Dynamic Monitori Complete Memory	•	elements. Valve	es lock-out	due to asyn	chronous n		rated into two identic e elements during ac supply.		
Valve Reset		•	Can only be accomplished by remote air signal, electrical solenoid reset signal, or manual pushbutton reset. The valve cannot be reset by removing and re-applying supply pressure.						
Poppet Design		Dirt tolerant, we	ar compen	sating for q	uick respon	se and high flow	capacity		
PTFE Backup Pist	on Rings	Enhances valve	endurance	e enabling o	peration wi	th or without in-lir	ne lubrication		
Status Indicator	Includes a pressure switch with both normally open (NO) and normally closed (NC) contacts to pressure status feedback to the control system indicating whether the valve is in the lockout or ready-to-run conditions.								
Silencer		High flow, clog r	esistant bu	ilt-in silence	er				
Mounting		Base mounted f	for ease of	valve replac	ement. Cap	otive valve-to-bas	e mounting screws.		
Flexible Piping		Inlet and outlet	ports on bo	th sides (pl	ugs for unu	sed ports include	d)		
Intermediate Pilot (Basic Size 12 & 30 va	-						use the same size so hese larger valves.	lenoids as valve	
SISTEMA Library		Available for dov	wnload at re	osscontrols	.com				
			PRODI	UCT CREDE	NTIALS				
Safety Category	DGUV (German Social	Accident Insurance)	Decla CE	ration of Conf	ormity EAC	ISO Standard	CSA Certificate of Compliance	CRN Certification	
Cat. 4 SIL 3 Functional Salety	HSM 00 Sicherheit tested s	0008 seprift afety	C€	UK	EAC	ISO 13849-1:2015	c us	Available for appropriately tested valves	

Specifications



			STANDARD SPE	CIFICATIONS	3				
	Function		3/2 Normally Closed Val	ve					
	Construction Design		Dual Poppet	Dual Poppet					
	Actuation		Electrical – Solenoid Pilot Controlled						
		Туре	Base	Base					
GENERAL	Mounting	Orientation	Vertically with pilot solenoids on top						
	Connection		Threaded; G, NPT						
	Monitoring		Dynamically, cyclically, i Monitoring function has	internally during memory and re	g each actuating and de-actuating movement equires an overt act to reset unit after lockout				
	Minimum Operation	Frequency	Once per month, to ensu	ure proper funct	ion				
	Temperature	Ambient	15° to 122°F (-10° to 50)°C)					
	Temperature	Media	40° to 175°F (4° to 80°C	C)					
OPERATING CONDITIONS	Flow Media		Filtered, lubricated or un	lubricated (min	eral oils according to DIN 51519, viscosity classes 32-46)				
			Valve	2	45 to 150 psig (3.1 to 10.3 bar)				
	On a setting Discourse		Basic Size	4, 8, 12, 30	30 to 120 psig (2.1 to 8.3 bar)				
	Operating Pressure		Remote Air Reset Press	ure	For remote air reset option – must be equal to inlet pressure				
			Manual Pressure	Encapsulated, push button actuation					
	Solenoids		Operating Voltage	Valve Basic Size	Power Consumption (each solenoid)				
			04 malta DO	2, 4, 12, 30	5.8 watts nominal, 6.5 watts maximum				
			24 volts DC	8	15 watts				
			110 volts AC, 50 Hz;	2, 4, 12, 30	5.8 watts nominal, 6.5 watts maximum				
	Primary Solenoids		120 volts AC, 50/60 Hz	8	36 VA inrush and 24.6 VA holding				
	Trimary Colonolds		230 volts AC, 50/60 Hz	2, 4, 12, 30	5.8 watts nominal, 6.5 watts maximum				
				8	32 VA inrush and 22 VA holding				
			Rated for continuous duty Design according to VDE 0580						
ELECTRICAL DATA			24 volts DC	0300					
	Reset Solenoids	Reset Solenoids		2, 4, 8, 12, 30	5.8 watts nominal, 6.5 watts maximum				
			120 volts AC, 50/60 Hz 230 volts AC, 50/60 Hz		8, 12, 5,8 watts nominal 6,5 watts maximum				
	Enclosure Rating		DIN 40050, IP65, IEC 60)529					
	Electrical Connection	n	DIN EN 175301-803 For	m A, or M12					
	Mechanical Pressur (Status Indicator) F		NO/NC Contacts - 0.1 A,	125/250 volts	AC; 0.1 A, 30 volts DC; 0.3 A, 60 volts DC				
	Solid State Pressur (Status Indicator) F		Supply Voltage - 8-30 vo Current Consumption <4						
	Valve Body		Cast Aluminum						
CONSTRUCTION MATERIAL	Poppet		Acetal and Stainless Ste	el					
	Seals		Buna-N						
			Category	CAT 4, PL e					
	Functional Cofety D	oto	B _{10D}	20,000,000					
SAFETY DATA	Functional Safety D	aid	PFH _D	7.71x10 ⁻⁹					
			MTTF _D	301.9 (n _{op} : 66	2400)				
	Vibration/Impact Re	esistance	Tested to DIN EN 60068	-2-6					
	IMPORTANT	NOTE: Please re	ead carefully and thoroughly	all of the CAUT	ONS, WARNINGS on the inside back cover.				

Ordering Information

MODEL NUMBER CONFIGURATOR 3-Way 2-Position Valves DM2D 1 1 N **B21** A 005 **Reset Type** Series Other Options' Remote Air Connector Description Solenoid Thread Solenoids 4 Manual D Connector not included DIN EN 175301-803 Solenoid Reset** NPT N Form A Mechanical Pressure DIN EN Connector included Switch* **Port Size** Basic M12 Solid State Pressure Size Inlet Outlet M12 Built-in Connector included (24 V DC only) Sensor** 1/4 1/4 **B20** (Leave Blank) 2 3/8 3/8 **B21** Solenoids 1/2 1/2 **B42** 4 Solenoid Reset** Adapter DIN EN to M12 1/2 3/4 **B43** Connector included M12 Mechanical Pressure 005 3/4 3/4 A54 (24 V DC only) 8 Switch*** 1 **A55** Solid State Pressure M12 Built-in Connector included 1 1 A66 Sensor** 12 1-1/2 A67 See options for connectors or wiring kits. 30 1-1/2 2 A88 ** If solenoid reset type option is selected. *** If the specific status indicator option is selected. Current Voltage* 24 V Α DC 12 V D Status Indicator 110 V, 50 Hz Mechanical Pressure Switch, DIN EN 175301-803 Form A 1 В 120 V, 50/60 Hz 2 Solid State Pressure Sensor, M12 AC 230 V, 50/60 Hz C** None Χ 24 V E For other voltages consult ROSS. * 230 V AC not available in the U.S. (OSHA regulations limit press control voltage to no more than 120 V AC). Valves and Sub-Bases can be ordered separately, see Replacement Valves and Sub-Bases page.

 
Valve Basic Size	Por	t Size		ow C _V	Weight	Simplified Schematic		
	1	2	1-2	2-3	lb (kg)			
2	1/4	1/4	0.47	2.66	E (0.0)			
2	3/8	3/8	2.17 3.66		5 (2.3)			
4	1/2	1/2	0.00	0.70	0.0 (0.0)			
4	1/2	3/4	2.80	6.70	6.0 (2.8)			
8	3/4	3/4	4.63	12.55	0.1 (4.0)			
0	1	1	4.03		9.1 (4.2)	3 %		
12	1	1	8.86	20.78	15 5 (7.1)	1 2		
12	1	1-1/2	0.00	20.70	15.5 (7.1)	> >		
30	1-1/2	2	20.22	53.68	32.6 (14.8)			
# Valve and base assembly wi	Valve and base assembly with status indicator and solenoid reset.							

Valve Operation




Valve De-actuated (ready-to-run)

The flow of inlet air pressure into the crossover passages is restricted by the size of the passage between the stem and the valve body opening. Flow is sufficient to quickly pressurize pilot supply/timing chambers A and B. The inlet poppets prevent air flow from crossover passages into the outlet chamber. Air pressure acting on the inlet poppets and return pistons securely hold the valve elements in the closed position. (Air passages shown out of position and reset adapter omitted for clarity.



Valve Actuated

 Energizing the pilot valves simultaneously applies pressure to both pistons, forcing the internal parts to move to their actuated (open) position, where inlet air flow to crossover passages is fully open, inlet poppets are fully open and exhaust poppets are fully closed. The outlet is then quickly pressurized, and pressure in the inlet, crossovers, outlet, and timing chambers are quickly equalized. De-energizing the pilots quickly causes the valve elements to return to the ready-to-run position.




Valve Locked-out

Whenever the valve elements operate in a sufficiently asynchronous manner, either on actuation or de-actuation, the valve will move to a locked-out position. In the locked-out position, one crossover and its related timing chamber will be exhausted, and the other crossover and its related timing chamber will be fully pressurized. The valve element (side B) that is partially actuated has pilot air available to fully actuate it, but no air pressure on the return piston to fully de-actuate the valve element. Air pressure in the crossover acts on the differential of side B stem diameters creating a latching force.

Side A is in a fully closed position, and has no pilot air available to actuate, but has full pressure on the inlet poppet and return piston to hold the element in the fully closed position.

Inlet air flow on side A into its crossover is restricted, and flows through the open inlet poppet on side B, through the outlet into the exhaust port, and from the exhaust port to atmosphere. Residual pressure in the outlet is less than 1% of inlet pressure.

 The return springs are limited in travel, and can only return the valve elements to the intermediate (locked-out) position. Sufficient air pressure acting on the return pistons is needed to return the valve elements to a fully closed position.




Resetting the Valve

The valve will remain in the locked-out position, even if the inlet air supply is removed and re-applied. A remote reset signal (air or electric), or a manual push button actuation must be applied to reset the valve.

Reset is accomplished by momentarily pressurizing the reset port. Actuation of the reset piston physically pushes the main valve elements to their closed position. Inlet air fully pressurizes the crossovers and holds the inlet poppets on seat. Actuation of the reset piston opens the reset poppet, thereby, immediately exhausting pilot supply air, thus, preventing valve operation during reset. (Reset adapter added to illustration.)


De-actuation of reset pistons causes the reset poppets to close and pilot supply to fully pressurize.

 Reset air pressure can be applied by a remote 3/2 normally closed valve, or from an optional 3/2 normally closed solenoid, or a manual push button mounted on the reset adapter.



Status Indicator

 
The status indicator pressure switch will actuate when the main valve is operating normally, and will de-actuate when the main valve is in the locked-out position or inlet pressure is removed. This device is not part of the valve lockout function, but, rather, only reports the status of the main valve.




Status Indicator in normal ready-to-run position


Basic Size 12 and 30 valves require relatively large pilots to actuate and de-actuate the main valve elements. In order to achieve extremely quick valve response for such large pilots, a 2-stage solenoid pilot system is incorporated into the design.

 This keeps the required electrical current to operate the pilots to a minimum.



Basic Size 12 & 30 Pilots

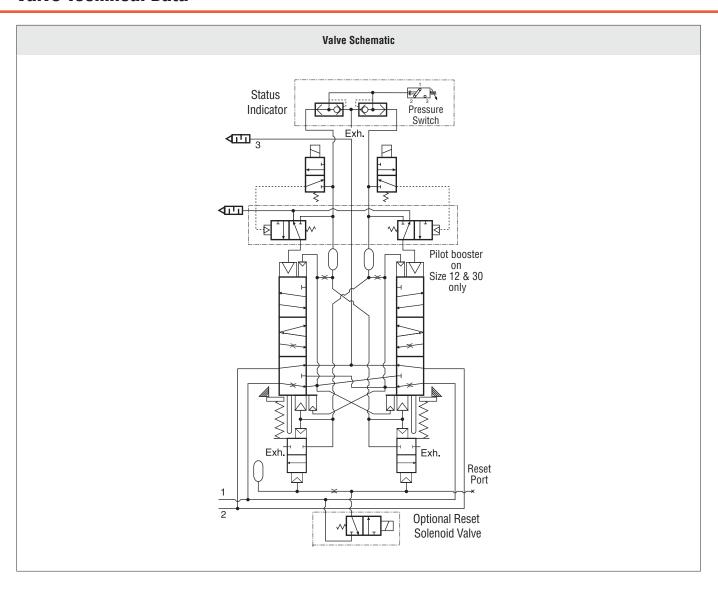


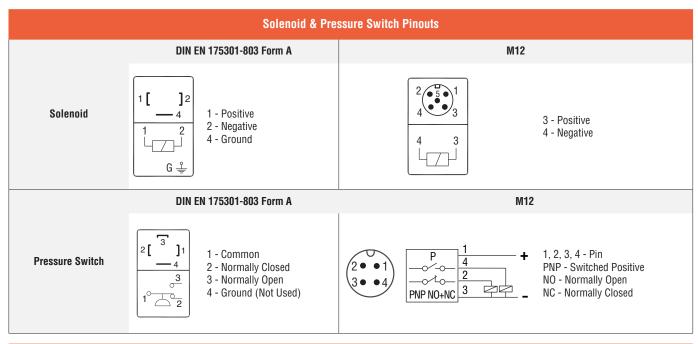





VALVE RESPONSE CHARTS


The charts below represent the fill and exhaust times for each of the various sizes of DM^{2®} Series D double valves. The "fill" times were measured while raising (filling) the pressure in a volume from 0 to 30, 60, & 80 psi (0 to 2.1, 4.1, & 5.5 bar) with a 90 psi (6.2 bar) inlet pressure. Conversely, the "exhaust" times were measured while lowering the pressure (exhausting) in a volume from 90 psi (6.2 bar) down to 90 to 60, 30, & 9 psi (4.1, 2.1, & 0.6 bar). Exhausting tests performed with silencer installed.

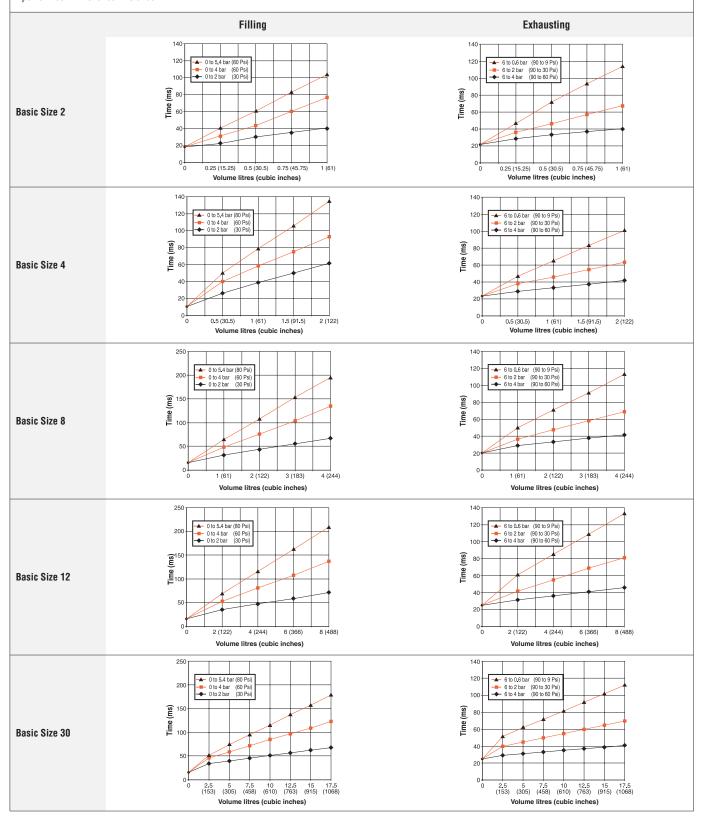

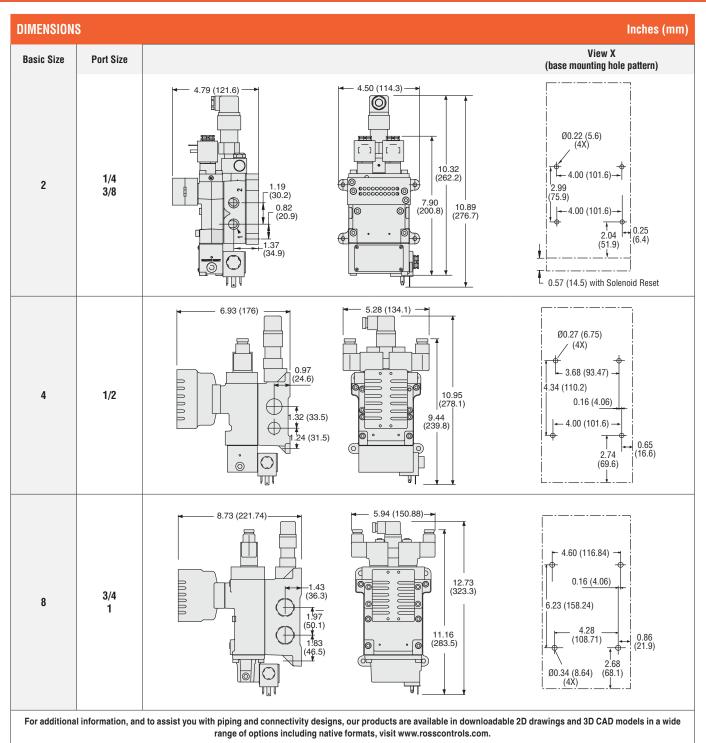


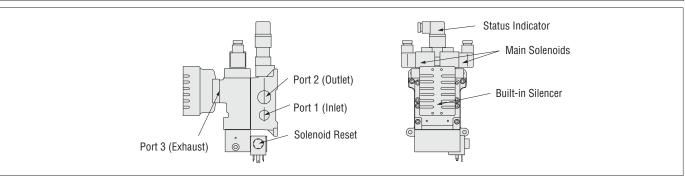



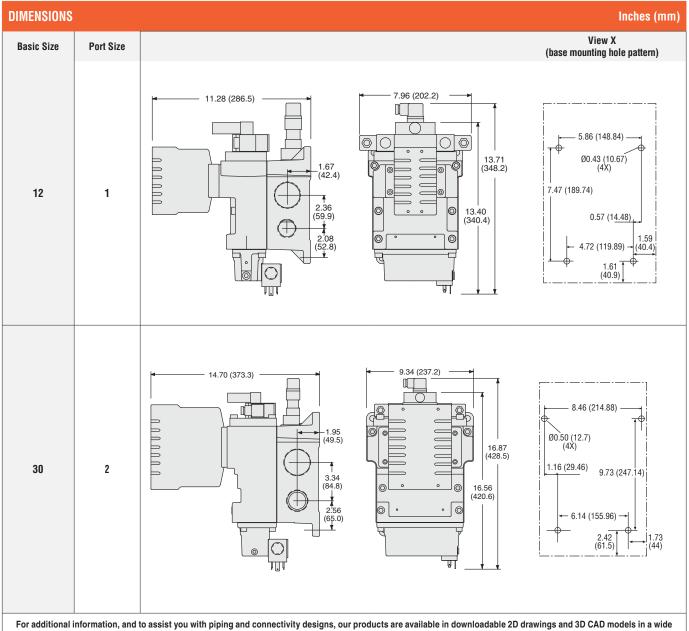

For additional information, and to assist you with piping and connectivity designs, our products are available in downloadable 2D drawings and 3D CAD models in a wide range of options including native formats, visit www.rosscontrols.com.

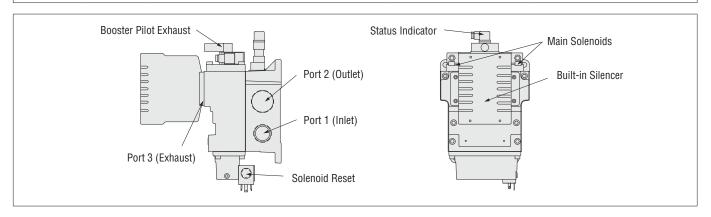

Accessories

ELECTRICAL STATUS INDICATION									
Pressure Switches for Status Indicator	Indicator Type	Connector Type	Model Number	Port Thread	Factory Preset psi (bar)				
	Mechanical Pressure Switch	DIN EN 175301-803 Form A	1104A30	M10x1	psi (bar) 22 (1.5) falling 17 (1.2) falling				
	Mechanical Pressure Switch	M12		IVITUXT	22 (1.3) failing				
	Solid State Pressure Sensor	M12	1335B30W	M10x1	17 (1.2) falling				
Status Indicator	Indicator Type	Connector Type	Model Numb	oer	Factory Preset psi (bar)				
Assemblies	Mechanical Pressure Switch	DIN EN 175301-803 Form A	670B94		22 (1.5) falling				

M12

Solid State Pressure Sensor

ENERGY RELEASE VERIFICATION										
Pressure Switches	Verification Type	Verification Type Installation Location Connector Type Model No.				Port Thread				
	Electrical Downstream DIN EN 175301-803 Form A		586A86	5 (0.3) falling	1/8 NPT					
Redundant Pressure	Verification Type	Installation Location	Connector Type	Model Number	Factory Preset psi (bar)	Port Size				
Switch Assembly	Electrical (Dual)	Downstream	DIN EN 175301-803 Form A	RC026-13	5 (0.3) falling	3/8 NPT				

Pinouts									
Mechanical	Pressure Switch	Solid State Pressure Sensor							
DIN EN 175301-803 Form A	M12	M12							
2 [3] 1 2 - Common 2 - Normally Closed 3 - Normally Open 4 - Ground (Not Used)	1 - Common 2 - Normally Closed 3 - Not Used 4 - Normally Open	1, 2, 3, 4 - Pin PNP - Switched Positive NO - Normally Open NC - Normally Closed							

17 (1.2) falling

766B94



PREWIRED ELECTRICAL CONNECTORS

			Cab		Kit N	lumber				
	End 1	End 2	Length	Connection	Quantity	Cord Diameter	Without	Li	ghted Connect	or
	Connector	Cord	meters (feet)	Connection	Included	mm	Light	24 V DC	120 V AC	230 V AC
			5 (16.4)	Solenoid	3	6	2283H77	2532H77-W	V 2532H77-Z 2532	2532H77-Y
Prewired	DIIN EIN 1/3301-003	Flying	3 (10.4)	Status Indicator	1	0	2203111	2552111-44		2332117-1
Connector	Form A	leads	10 (32.8)	Solenoid	3	6	2284H77	2533H77-W		2533H77-Y
Kits			10 (32.0)	Status Indicator	1	0	2204111	2000H11-W		2000111-1
			5 (16 A)	Solenoid	3	6	2288H77	_		
	M12	Flying	5 (16.4)	Status Indicator	1	0	2200111	_	_	_
	5-pin, Female	leads	10 (32.8)	Solenoid	3	6	2289H77	_		
			10 (32.0)	Status Indicator	1	0	2203011	_	_	_

Prewired
Connectors

	Cable							Model Number			
End 1	End 2	Connection	Quantity	Length meters	Cord Diameter	Without	Li	Lighted Connector			
Connector	Cord	Connection	Included	(feet)	mm	Light	24 V DC	120 V AC	230 V AC		
DIN EN 175301-803	Flying leads	Solenoid	1	2 (6.5)	6	721K77	720K77-W	720K77-Z	720K77-Y		
Form A	riyiliy itaus	Solellolu	1	2 (6.5)	10	371K77	383K77-W	383K77-Z	383K77-Y		
M12	Elving leade	eads Status Indicator	1	5 (16.4)	6	2666H77	_	_	_		
5-pin, Female	riyiliy leaus	Status illulcator	1	10 (32.8)	6	2667H77	_	_	_		

ELECTRICAL CONNECTORS

			Connector	Model Number						
Connectors	Туре	Connection	Fitting Connection	Quantity	Cord Diameter	Without Light		Lighted Connector		
	Туро	Connection	Titting Connection	Included	mm	Without Light	24 V DC	120 V AC	230 V AC	
	DIN EN 175301-803	Solenoid	Cable grip	1	8 to 10	937K87	936K87-W	936K87-Z	936K87-Y	
	Form A	SUICITUIU	1/2" NPT conduit	1	_	723K77	724K77-W	724K77-Z	724K77-Y	

Connector Pinouts								
Solenoi	i	Status Ind	Brown Grey Black Green (Vellagy (Ground)					
DIN EN 175301-803	M12	DIN EN 175301-803	M12					
1 - Black 2 1 1 2 - Black 2 - Black 4 - Green/Yellow (Ground)	5 2 3 - Blue 4 - Black	1 - Brown 2 - Grey 3 - Black 4 - Green/Yellow (Ground)	2 - White 3 - Blue					

JUNCTION BOX OPTIONS

		J-Box			Cable			
Wiring Kits with J-Box	Cor	nection	J-Box	(Connector Type	Quantity	Length	Kit Number
	Control System	Solenoids / Status Indicator	Quantity	End 1	End 2	Included	meters (feet)	
	10-pin Mini	M12 (5-pin)	1	M12	DIN EN 175301-803 Form A	4	1.0 (3.3)	2249H77
		,	1	M12	M12	4	1.0 (3.3)	2250H77


	Connection	End 1	End 2	Conductors Type	Length meters (feet)	Quantity Included	Kit Number
10-Pin MINI Cables	J-Box to Control System			3.7 (12) 1		1	2253H77
		10-pin Mini	Elving loads	Flying leads 18-gauge wire 6.1 (20) 1 9.1 (30) 1	1	2254H77	
		10-pili iviilii	riyiriy leaus		9.1 (30)	1	2255H77
					15.2 (50)	1	2256H77


Outlet Port Pressure Monitoring Wiring
Kit

Po	ort Splitter			Cable			
Number of		Splitter	End 1	End 2	Ougatity Launth	Kit Number	
Port Connectors	Ports	Quantity	Connector	Connector	Quantity Length Included meters (fe		
M12	3	1	M12	DIN EN 175301-803 Form A	1	1.0 (3.3)	2251H77

Connectors Pinout and Wiring Diagram

J-Box Wiring

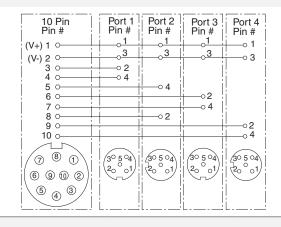

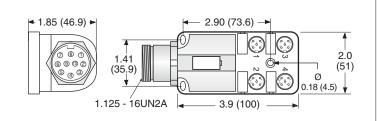

10-Pin MINI Cable

ΡI	N #	Wire Colors
1	+24 V DC	Orange
2	Common V DC	Blue

4 Solenoid A

5 Solenoid B

White w/Black Red w/Black Green w/Black

PIN# 6 -

7 Remote Reset

9 Remote Valve Fault Light 10 Remote System OK Light

 
Wire Colors

 
Orange w/Black Red

 
Green/Yellow Black White



Outlet Port Pressure Monitoring – Port Splitter







A & B Female C Male



EXHAUST SILENCERS

High Flow Noise Reduction Silencer Kits

Kit Number#* Valve **Basic Size** R/Rp Thread **NPT Thread** 4 2329H77 2324H77 8 2329H77 2325H77 12 2330H77 2326H77 30 2331H77 2327H77



- # Exhaust Flange Kit required, see below ordering information.
- * Kits include all plumbing required for installation.

Reduces the Exponentially Perceived Noise (EPNdB), Impact noise reduction in the 35–40 dB range. Recommended for air exhaust applications for pressures up to 125 psig (8.6 bar). Pressure Range - 125 psig (8.6 bar) maximum.

Valve Basic Size	Flow scfm (L/s)		Dimens inches			Pressure Range
54010 0120	001111 (270)	Width	Height (R-RP)	Height (NPT)	Depth	psig (bar)
4	800 (378)	4.34 (110.2)	21.40 (543.6)	19.06 (484.1)	7.27 (184.7)	
8	800 (378)	5.41 (137.4)	23.52 (597.4)	21.18 (538.0)	8.41 (213.6)	0-125 (0-8.6)
12	2080 (982)	6.74 (117.2)	28.20 (716.3)	25.85 (656.6)	10.66 (270.8)	maximum
30	7200 (3398)	9.85 (250.2)	41.55 (1055.4)	41.55 (1055.4)	13.47 (342.1)	

^{**} Dimensions reflect valve with installed silencer.

	Valve	Valve	Kit Nu	ımber
Exhaust Flange	Basic Size	Port Size	G Thread	NPT Thread
Kits For Noise Reduction Silencers	4	1	D276B25	726B25
	8	1	D617B25	617B25
	12	1-1/2	D619B25	619B25
	30	2-1/2	D621B25	621B25

RESET VALVES FOR DOUBLE VALVES WITH REMOTE RESET

Valves with the remote reset option require a small 3/2 reset valve and the installation of a 1/8 inch air line from the reset valve to the reset port of the double valve. ROSS offers 3/2 normally closed valves with either manual or electric control that are suitable for this purpose.

Compact Valves for Line Mounting	Miniature Valve for Base Mounting	Manual Palm Button Valves	Mushroom Valves
THE CONTROL OF THE CO	TO ME TO STATE OF THE TOTAL OF		ENDOSE TOTAL

Direct Solenoid Pilot Control – Compact Valves for Line Mounting										
	Port			Valve Mode	l Number*					Response
Valve Type	Size		G Thread	read NPT Thread		Flow	Consta	Constants**		
1	1, 2, 3	24 V DC	110-120 V AC 50/60 Hz	230 V AC 50/60 Hz	24 V DC	110-120 V AC 50/60 Hz	230 V AC 50/60 Hz	U _V	М	F
Normally-Closed	1/8	D1613B1020W	D1613B1020W D1613B1020Z D1613B1020Y 1613B1020W 1613B1020Z 1613B1020Y					0.3	5	2.90
* For other voltages, consult ROSS.										

The constants above, designated M and F, can be used to determine the amount of time required to fill or exhaust a volume of any size using the formula on the right:

VIv. Resp. Time (msec) = M + F *V

M = avg. time for parts movement

F = msec. per cubic inch of volume

V = volume in cubic inches

Direct Solenoid Pilot Control – Miniature Valve for Base Mounting Valve Model Number* Flow Valve Type Override Type C_{v} 24 V DC 110-120 V AC 50/60 Hz 230 V AC 50/60 Hz Normally-Closed Non-Locking W1413A1409W W1413A1409Z W1413A1409Y 0.1 * For other voltages, consult ROSS.

	Sub-Base Model Number				
Sub-Base for Direct Solenoid Control Valves	G Thread	NPT Thread			
	D516B91	516B91			

Manual Palm Button Valves						
Valve Operator	Port Size	Button Color	Valve Mod	Valve Model Number		
Туре	1 011 0120	Dutton Color	G Thread	NPT Thread	C _v	
Heavy Duty Palm Button	1/4	Green	D1223B2001	1223B2001	0.0	
		Red	D1223B2003	1223B2003	0.8	
	1/4	Green	D1223B2FPG	1223B2FPG		
Flush Pushbutton		Red	D1223B2FPR	1223B2FPR		
	474	Green	D1223B2MBG	1223B2MBG	0.9	
Mushroom Button	1/4	Red	D1223B2MBR	1223B2MBR		

CAUTIONS, WARNINGS And STANDARD WARRANTY



ROSS OPERATING VALVE, ROSS CONTROLS®, ROSS DECCO®, and AUTOMATIC VALVE INDUSTRIAL, collectively the "ROSS Group".

PRE-INSTALLATION or SERVICE

- 1. Before servicing a valve or other pneumatic component, be sure all sources of energy are turned off, the entire pneumatic system is shut down and exhausted, and all power sources are locked out (ref: OSHA 1910.147, EN 1037).
- 2. All ROSS Group Products, including service kits and parts, should be installed and/or serviced only by persons having training and experience with pneumatic equipment. Because any product can be tampered with and/or need servicing after installation, persons responsible for the safety of others or the care of equipment must check ROSS Group Products on a regular basis and perform all necessary maintenance to ensure safe operating conditions.
- 3. All applicable instructions should be read and complied with before using any fluid power system to prevent harm to persons or equipment. In addition, overhauled or serviced valves must be functionally tested prior to installation and use. If you have any questions, call your nearest ROSS Group location.
- 4. Each ROSS Group Product should be used within its specification limits. In addition, use only ROSS Group components to repair ROSS Group Products.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

FILTRATION and LUBRICATION

- 1. Dirt, scale, moisture, etc., are present in virtually every air system. Although some valves are more tolerant of these contaminants than others, best performance will be realized if a filter is installed to clean the air supply, thus preventing contaminants from interfering with the proper performance of the equipment. The ROSS Group recommends a filter with a 5-micron rating for normal applications.
- 2. All standard ROSS Group filters and lubricators with polycarbonate plastic bowls are designed for compressed air applications only. Use the metal bowl guard, where provided, to minimize danger from high pressure fragmentation in the event of bowl failure. Do not expose these products to certain fluids, such as alcohol or liquefied petroleum gas, as they can cause bowls to rupture, creating a combustible condition and hazardous leakage. Immediately replace crazed, cracked, or deteriorated bowls.
- 3. Only use lubricants which are compatible with materials used in the valves and other components in the system. Normally, compatible lubricants are petroleum base oils with oxidation inhibitors, an aniline point between 180°F (82°C) and 220°F (104°C), and an ISO 32, or lighter, viscosity. Avoid oils with

phosphate type additives which can harm polyurethane components, potentially leading to valve failure which risks personal injury, and/or damage to property.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

AVOID INTAKE/EXHAUST RESTRICTION

- 1. Do not restrict air flow in the supply line. To do so could reduce the pressure of the supply air below minimum requirements for the valve and thereby causing erratic action.
- 2. Do not restrict a valve's exhaust port as this can adversely affect its operation. Exhaust silencers must be resistant to clogging and must have flow capacities at least as great as the exhaust capacities of the valves. Contamination of the silencer can result in reduced flow and increased back pressure.

WARNINGS: Failure to follow these instructions can result in personal injury and/or property damage.

SAFETY APPLICATIONS

- 1. Mechanical Power Presses and other potentially hazardous machinery using a pneumatically controlled clutch and brake mechanism must use a press control double valve with a monitoring device. A double valve without a self-contained monitoring device should be used only in conjunction with a control system which assures monitoring of the valve. All double valve installations involving hazardous applications should incorporate a monitoring system which inhibits further operation of the valve and machine in the event of a failure within the valve mechanism.
- 2. Safe Exhaust (dump) valves without a self-contained monitoring device should be used only in conjunction with a control system which assures monitoring of the valve. All Safe Exhaust valve installations should incorporate a monitoring system which inhibits further operation of the valve and machine in the event of a failure within the valve mechanism.
- 3. Per specifications and regulations, the ROSS L-O-X $^{\odot}$ and L-O-X $^{\odot}$ with EEZ-ON $^{\odot}$, N06 and N16 Series operation products are defined as energy isolation devices, NOT AS EMERGENCY STOP DEVICES.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

STANDARD WARRANTY

All products sold by the ROSS Group are warranted for a one-year period [with the exception of Filters, Regulators and Lubricators ("FRLs") which are warranted for a period of seven (7) years] from the date of purchase. All products are, during their respective warranty periods, warranted to be free of defects in material and workmanship. The ROSS Group's obligation under this warranty is limited to repair, replacement or refund of the purchase price paid for products which the ROSS Group has determined, in its sole discretion, are defective. All warranties become void if a product has been subject to misuse, misapplication, improper maintenance, modification or tampering. Products for which warranty protection is sought must be returned to the ROSS Group freight prepaid.

THE WARRANTY EXPRESSED ABOVE IS IN LIEU OF AND EXCLUSIVE OF ALL OTHER WARRANTIES AND THE ROSS GROUP EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE ROSS GROUP MAKES NO WARRANTY WITH RESPECT TO ITS PRODUCTS MEETING THE PROVISIONS OF ANY GOVERNMENTAL OCCUPATIONAL SAFETY AND/OR HEALTH LAWS OR REGULATIONS. IN NO EVENT IS THE ROSS GROUP LIABLE TO PURCHASER, USER, THEIR EMPLOYEES OR OTHERS FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY RESULT FROM A BREACH OF THE WARRANTY DESCRIBED ABOVE OR THE USE OR MISUSE OF THE PRODUCTS. NO STATEMENT OF ANY REPRESENTATIVE OR EMPLOYEE OF THE ROSS GROUP MAY EXTEND THE LIABILITY OF THE ROSS GROUP AS SET FORTH HEREIN.



	,			
	ROSS CONTROLS	USA	Tel: +1-248-764-1800	www.rosscontrols.com
AMERICAS	ROSS CONTROLS CANADA Ltd.	Canada	Tel: +1-416-251-7677	www.rosscanada.com
	ROSS DO BRASIL EIRELI	Brazil	Tel: +55-11-4335-2200	www.rosscontrols.com.br
	ROSS EUROPA GmbH	Germany	Tel: +49 (0)6103-7597-100	www.rosseuropa.com
EUROPE	ROSS FRANCE SAS	France	Tel: +33-(0)1-49-45-65-65	www.rossfrance.com
	ROSS PNEUMATROL Ltd.	United Kingdom	Tel: +44 (0)1254 872277	www.rossuk.co.uk
	ROSS CONTROLS INDIA Pvt. Ltd.	India	Tel: +91-44-2624-9040	www.rosscontrolsindia.com
ASIA & PACIFIC	ROSS CONTROLS (CHINA) Ltd.	China	Tel: +86-21-6915-7961	www.rosscontrolschina.com
	ROSS ASIA K.K.	Japan	Tel: +81-42-778-7251	www.rossasia.co.jp
	AUTOMATIC VALVE INDUSTRIAL LLC	USA	Tel: +1-248-474-6700	www.automaticvalve.com
	ROSS DECCO COMPANY	USA	Tel: +1-248-764-1800	www.rossdecco.com
	ROSS PNEUMATROL Ltd.	United Kingdom	Tel: +44 (0)1254 872277	www.pneumatrol.com
	manufactIS GmbH	Germany	Tel: +49 (0)2013-16843-0	www.manufactis.net

Full-Service Global Locations

There are ROSS Distributors Throughout the World

To meet your requirements across the globe, ROSS distributors are located throughout the world. Through ROSS or its distributors, guidance is available for the selection of ROSS products, both for those using fluid power components for the first time and those designing complex systems.

Other literature is available for engineering, maintenance, and service requirements.

If you need products or specifications not shown in this catalog, please visit ROSS' website, contact ROSS or your ROSS distributor. The ROSS Support Team will be happy to assist you in selecting the best product for your application.

For a current list of countries and local distributors, visit ROSS' at www.rosscontrols.com.