 
## **Accessories**

	FAZ-NA and FAZ-NA-L UL 489 Breakers		
	Description	Catalog Number	
Contact	Two-pole contact or auxiliary contact/trip indicating contact	Z-NHK ①	
Auxiliary Contact	Auxiliary contact	Z-IHK-NA	



Auxiliary Contact	Auxiliary contact	Z-IHK-NA
XII.		
Shunt Trip	Shunt trip 110–415 Vac	FAZ-XAA-NA110-415VAC
855	Shunt trip 12–110 Vac	FAZ-XAA-NA12-110VAC
Padlock Hasp	Padlock hasp	Z-IS/SPE-1TE
Lockoff Device	UL lockoff device	FAZPLOFF

## FAZ-NA and FAZ-NA-L UL 489 Breakers, continued

	Description	Catalog Number
Busbar	Busbar—single-pole, 6 terminals 2345	Z-SV/UL-16/1P-1TE/6
Traverson To	Busbar—single-pole, 12 terminals 2345	Z-SV/UL-16/1P-1TE/12
	Busbar—single-pole, 18 terminals 2345	Z-SV/UL-16/1P-1TE/18
	Busbar—two-pole, 6 terminals 2345	Z-SV/UL-16/2P-2TE/6
	Busbar—two-pole, 12 terminals 2345	Z-SV/UL-16/2P-2TE/12
	Busbar—two-pole, 18 terminals 2345	Z-SV/UL-16/2P-2TE/18
	Busbar—three-pole, 6 terminals 2345	Z-SV/UL-16/3P-3TE/6
	Busbar—three-pole, 12 terminals 2345	Z-SV/UL-16/3P-3TE/12
	Busbar—three-pole, 18 terminals 2345	Z-SV/UL-16/3P-3TE/18
Busbar Shroud	Three-pole busbar shroud	ZV-BS-UL



**Extension Terminal** Extension terminal— 35 mm<sup>2</sup> (10-1/0 AWG)



Bus connector—conductors up to Z-EB/50/UL 50 mm<sup>2</sup> (~1/0 AWG)

Z-EK/35/UL



**Bus Connector** 

- ① Voltage of FAZ-NA circuit breaker is limited to 300V with this auxiliary contact installed.
- ② Do not cut commoning link.
- $\ensuremath{^{\circlearrowleft}}$  A maximum of three commoning links may be used in conjunction. Each breaker connected to the commoning link must have the same number of poles for proper use.
- Not for use with ring-tongue circuit breakers.
- <sup>⑤</sup> Bus may be center fed for high current capacity.